


# Parts List – Models 481/482

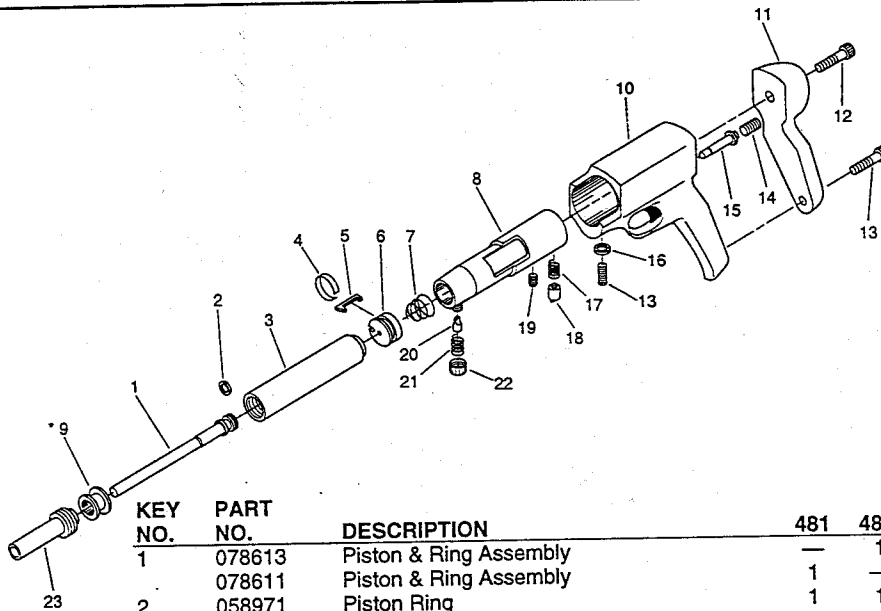

KEY NO.	PART NO.	DESCRIPTION	481	482
1	078613	Piston & Ring Assembly	—	1
	078611	Piston & Ring Assembly	1	—
2	058971	Piston Ring	1	1
3	076998	Barrel	—	1
	076670	Barrel	1	—
4	056216	Ejector Spring	1	1
5	075373	Ejector	1	1
6	075369	Breech	1	1
7	056215	Breech Spring	1	1
8	076690	Receiver Assembly	—	1
	076690-01	Receiver Assembly (Canadian)	—	—
	077549	Receiver Assembly	1	—
9	TA4083	Buffer (5 Pack)	—	1
10	078506	Handle Housing Assembly	1	1
10.1	045918	Pin	1	1
10.2	056209	Spring	1	1
10.3	075144	Trigger	1	1
11	056854	Recoil Pad	1	1
12	054857	Hex Head Screw, 1/4-20 x 1 3/8	1	1
13	054586	Hex Head Screw, 1/4-20 x 11/16	1	1
14	056217	Firing Pin Spring	1	1
15	075370	Firing Pin	1	1
16	WLI-4C	Internal Tooth Lockwasher	1	1
17	056218	Sear Spring	1	1
18	095153	Sear	1	1
19	054859	Cup Point Set Screw, 1/4-20 x 7/16	1	1
20	055977	Tang	1	1
21	055448	Compression Spring	1	1
22	056212	Tang Cap	1	1
23	102620	Muzzle/Spall Shield Kit	—	1
	102622	Muzzle/Spall Shield Kit	1	—
24	101320-01	Spall Shield (not shown)	1	1

**IMPORTANT:** Do not use key numbers when ordering service parts. Always order by part number and description. Include Model and Serial numbers.

096112